

TECHNICAL BULLETIN


SUBJECT: GS-207-01 Automatic Siren Disable
BULLETIN #: 0301 Rev.B
RELEASED: 09-10-02
UNIT S/N: All
MODULE S/N: N/A

This Bulletin describes how to disable the automatic siren feature where the siren is active with the lever switch in position 3. Refer to the installation instructions for further details.

Note that there are two different procedures depending on the version of siren.

Procedure:

1. Remove faceplate to determine version of siren. (4 screws with 7/64" allen wrench)
If the Resistor R67 location does not exist on the AMP BOARD as shown below, use the OLD VERSION PROCEDURE.

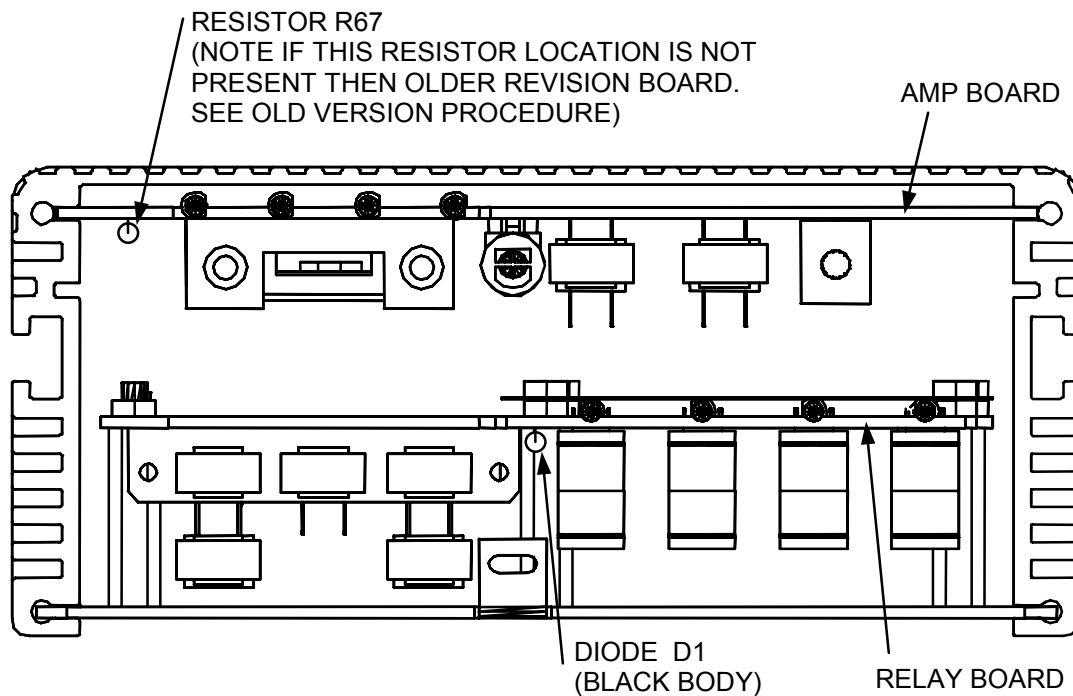

NEW VERSION PROCEDURE:

2. On the AMP BOARD, remove R67 resistor with wire cutters.
On the RELAY BOARD remove D1 diode with wire cutters.
3. Replace faceplate. (4 screws with allen wrench)
4. Done.

**CARSON MANUFACTURING COMPANY, INC.
TECHNICAL BULLETIN**

OLD VERSION PROCEDURE: (Must access parts in middle of AMP and RELAY BOARDS)

2. Remove the cover from the chassis. (4 screws on back with 7/64" allen wrench)
3. Free the AMP BOARD from the chassis. (2 screws on back near 10-pin connector with nut driver)
Will also need to disconnect ribbon cable from RELAY BOARD and remove the fuse.
4. Turn over the AMP BOARD and remove **R23 resistor** with wire cutters.
5. Free the RELAY BOARD from the chassis. (4 nuts with nut driver)
May also need to remove the 4 rocker LED cover held on with 2 nuts.
6. Turn over the RELAY BOARD and remove **D5 diode** with wire cutters.
7. Reassemble the siren in reverse order.